

Firmware Update for SOFAR inverters


This procedure describes how to update the firmware with an USB stick.

For Hybrid-Inverters with graphical display, please find the procedure on the next page.

Step 1

USB stick formatting with FAT 32.

Attention: the firmware files with the extension .bin must be kept in the original folder from the ZIP file, normally called “**firmware**” folder in the root folder of the stick.

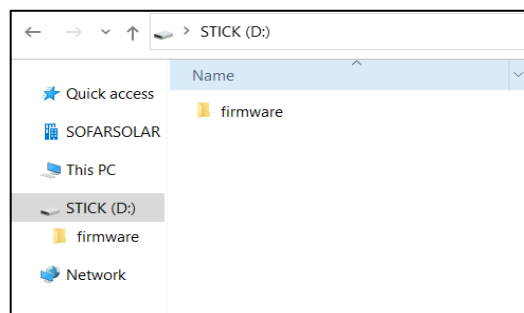

Step 2



Switch off DC and AC switches. Open USB cover and plug in USB stick

Step 3

Switch on DC switch. The screen with USB icon will be displayed:



Step 4

Press  key to enter menu, and select “SoftwareUpdate” With long press 

5. SoftwareUpdate

Step 5

Enter password as shown 0715



Adjust password by up and down key

Input Password!
0715

for next character please long press down (Enter)

Step 6

Software update will be performed for DSP1, DSP2 and ARM processor.


Updating DSP1...
04%

Firmware Update for HYD inverters

Step 1

USB stick formatting with FAT 32.

Attention: the firmware files with the extension .bin must be kept in the original folder from the ZIP file, normally called “**firmware**” folder in the root folder of the stick.

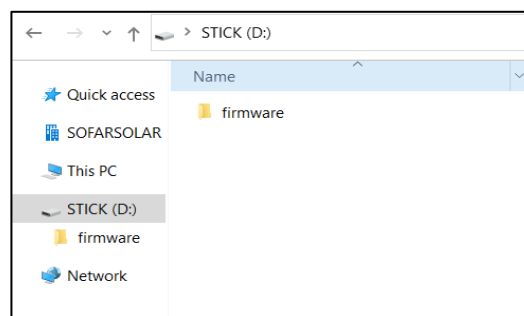

Step 2

Switch off DC and AC switches. Open USB cover and plug in USB stick

Step 3

Switch on DC switch. The screen with USB icon will be displayed:



Step 4


Press Back key to enter menu, and Select “Software Update” with Enter

Step 5

Enter password as shown 0715

Adjust password by up and down key

for next character please press Enter

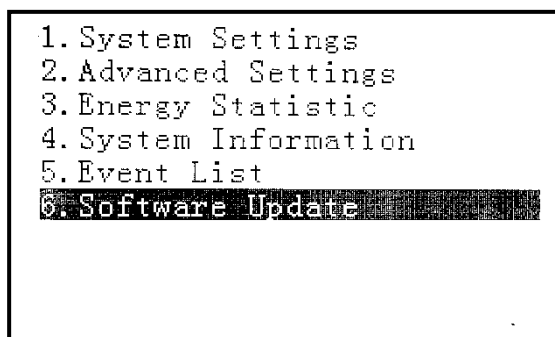

Step 6

Software update will be performed for DSP1, DSP2 and ARM processor.

